

# Foot Machine



## **Foot Massager**

Thank you for purchasing this Foot Massager.

Please read the instructions thoroughly before connection, operating or adjusting this unit. Please pay good attention to the safety precaution. Keep this manual in a safe place for later review.

### **Safety Precaution**

People experiencing the following conditions are advised against using this product:

- Person receiving medical treatments
- Person having high fever, heart diseases, hypertension, osteoporosis, arteriosclerosis
- Person who have had cerebral thrombus
- Women in menstruation or pregnancy including which recently had a birth
- Person with serious cognitive defects
- Person using heart pacemaker or having implanted devices in his feet.


## **Use environment**

- Do not place the foot massager in location with high humidity such as bathroom, to avoid the risk of getting electric shock, making short circuit or getting rusty.
- Do not operate the foot massager at temperature over 40 degree or near high temperature objects like heater or stove.
- Do not operate the foot massager at room temperature under 5 degrees because the thickening lubricating oil could make damage to the transmission gear and thus reduce the foot massager' s service life.
- To avoid discoloration and degeneration, do not place the foot massager where it will expose to sunlight for a long period of time.
- If this device is going to be used in a warm environment after a storage of low temperature, the interior metal parts could be attached with condensed water vapor, which would affect their normal functionality or even cause mechanical damage to them. Therefore, in this case, we highly recommend you to set the device quietly for a while (1 hour) to let it get the normal room temperature before you start to use it.

### Guarantee Rights

- This guarantee rights are not transferable.
- Since purchase date this product can enjoy free warranty in the warranty period (Appearance is not covered by the warranty).
- This product is warranted for one year.
- When the warranty service requested, please show the original purchase credentials and warranty card.
- The purchase date is subject to the valid purchase receipt received from retail counter.
- This warranty does not cover use scenarios like equipment leasing, ownership transfer, organizational usage.
- The following cases are not covered by the warranty, paid repair services are required (for personal and material cost):
  - (a) Damage caused by human factors, including use in non-normal working environment, use or storage not following the instructions. Damage caused by other improper use.
  - (b) Machine stripped, repaired or modified by user himself or by unauthorized third party without our permission.
  - (c) Damage caused by improper transportation after purchase.
  - (d) Damage caused by irresistible force (like flood, earthquake, fire, lightning).

### Control Panel

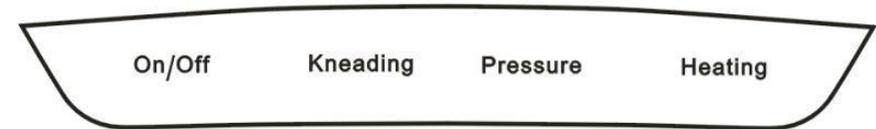

1. **On/Off:** Turn on/off the all massage functions
2. **Kneading:** Control the roller massage under the feet
3. **Pressure:** Control the air pressure function
4. **Heating:** Control the heating on/off function

### Light Indicator



**Lights flicker:** Auto program  
**Lights on :** manual program



**Lights on:** Kneading function on  
**Light off:** Kneading function off



**Lights flicker:** Soft intensity  
**Lights on :** hard intensity



**Lights on:** heating function on  
**Light off:** heating function off

### Warning!

Keep this far away from sharp objects. Stop using it after the chair cover is damaged, to avoid the possibility of getting drawn into working machine!

This product is not a plaything for children, keep them away from playing with it!

If the product falls into the water, the further usage is prohibited and must be sent for repair!

This product contains high pressure component, repair it by yourself is strictly prohibited, so as to avoid personal injury!

### Product Features:

Streamlined and fashionable designed, lightweight and portable;  
Integrated with multiple massage functions including Heating;  
Full foot massage, full acupuncture points massage;  
Removable and washable massage sacks.  
Power cable stowing design, make it easy to use.

#### a)Storage

- when not in use, put it back to package and keep it dry, ventilative and cool.
- do not over twist the power plug and cable
- do not hang the device on the power cable
- do not scrape the surface with shape material
- do not place the device under sunlight or in environment of high temperature

#### b)Cleaning

- before cleaning shut down the power and unplug the power cable.
- clean the surface with dry cloth
- do not clean the product using corrosive acid or other corrosive detergent

#### c)Maintenance

- keep it clean and away from high temperature environment
- when not in use for a long time, cover it with a dust cover to avoid dust invasion.

### Trouble-Shooting

if confronted with the following problems, try to fix it with the corresponding method. If the problem remains, send the device to service cent or ask professional service-craft to inspect and to repair.

Exception	Reason	Method
No work	1.power not turned on 2.function turned off	1.check the power cable connection 2. turn on the power
Stop working suddenly	1.power cut off 2.message time exceed 30 minutes 3.over heating protection activated 4.weight over loaded, rotation choked	1. check the power cable connection 2. restart the device 3. rest until the device cooled ab and restart 4. restart the device

Product Name:	Foot Massager
Rated Voltage:	110V-220V
Frequency:	50Hz
Rated Power:	40W
Rated Working Time	15Min
Safety Design	<input type="checkbox"/>